

For the best personal hygiene protection, Skelex advises using a personal Softgood set per worker. A personal Soft good set consists of a harness and a set of arm cups.

For the best hygiene please wash Softgoods regularly and clean the Flex-Frames before every working shift to prevent interpersonal contamination.


Cleaning and disinfecting FlexFrames

Step 1: dis-assemble both FlexFrames from the harness.

Step 2: dis-assemble both arm cups.

Step 3: spray FlexFrames with a disinfectant*

- * Kills 99.9% of germs.
- * Removes 90% of allergens.
- * No need to rinse.
- * Non-bleach, no solvents, bleach or polisher.

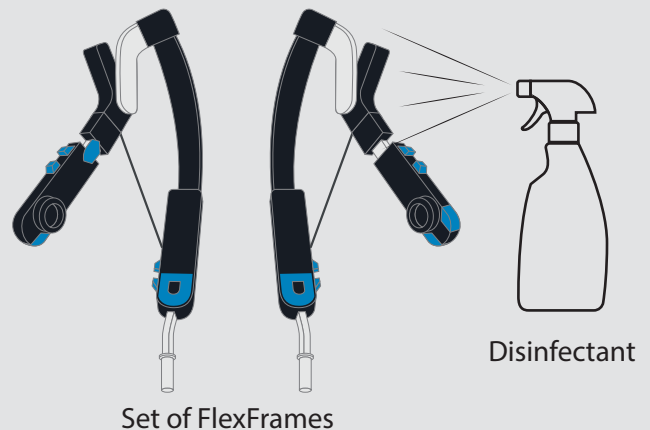

Step 4: wipe FlexFrames off with a dry cloth.

Step 5: install FlexFrames.

Washing instructions Harness, Arm cup socks and EVA padding

- Harness and textile components can be washed in a regular washing machine after inserting it in a (Skelex) laundry bag.
- Arm cup socks, Arm cup straps and Arm cup padding can be removed before washing.
- For best results, use an industrial washing service for safety clothing.
- Dry harness on hanger out of sunlight.
- Harness: machine wash max 75 degrees centigrade.
- Arm cup socks and EVA padding: max 30 degrees centigrade.
- No chlorine, or bleach.

